

Guidelines for Contractors

These guidelines provide information about private sewer lateral (PSL) testing requirements and procedures to enable plumbing contractors to help their customers meet Regional Private Sewer Lateral Program requirements and obtain a Compliance Certificate.

Regional PSL Program Requirements Overview

The Regional PSL Program requires that affected property owners obtain a certificate from EBMUD indicating that their private sewer laterals (PSLs) are free of leaks. The program applies to property owners who sell their property, build or remodel in excess of \$100,000, or change the size of their water meter. The program requires that PSLs be repaired or replaced as necessary, and pass an air or water verification test.

When the PSL passes the test, a Compliance Certificate will be issued by EBMUD as proof that the pipe is free of leaks. Compliance Certificates are required for the property owner to transfer title, obtain final building permit sign-off, or have an EBMUD work order processed for a change in water meter size.

Property owners will need to work with a contractor to have any required repair work done and to prepare the PSL for the air or water verification that will be witnessed by an EBMUD inspector.

Who is affected?

The program applies to residential, commercial and industrial property owners in EBMUD's wastewater service area in Emeryville, Oakland, Piedmont, and the Stege Sanitary District which serves Kensington, El Cerrito and the Richmond Annex.

When does the Regional PSL Program take effect?

The Regional PSL Program began in August 2011 and will be phased in through January 2012. Effective dates for each community are posted at www.eastbaypsl.com.

When will a Compliance Certificate expire?

PSLs that are completely replaced and that successfully pass testing requirements will receive a Compliance Certificate that is valid for 20 years from the date of issue. PSLs that are repaired and that successfully pass testing requirements will receive a Compliance Certificate that is valid for 7 years from the date of issue.

What do "repair" and "replacement" mean?

A repair is a correction of an isolated defect of the PSL. A replacement is installation of a new pipe along the entire length of the PSL and includes lining of the entire length of the PSL.

Guidelines

Step 1: Check Lateral Condition

Check the lateral for leaks or other defects and advise the property owner if work is needed. If no work is required, proceed to Step 4.

Step 2: Obtain Required Municipal Permits

Appropriate building and/or sewer permits must be obtained before beginning PSL repair or replacement. PSL repair, replacement, and testing must be performed in accordance with local ordinance requirements and the Regional PSL Program Ordinance, which is available online under "Tools for Professionals". For local ordinance and permit requirements, contact the agency where work is being performed.

City of Emeryville Building Department	(510) 596-4310
City of Oakland	(510) 238-3891
City of Piedmont Public Works Department	(510) 420-3050
Stege Sanitary District	(510) 524-4668

Step 3: Complete Required Work

Complete any required work to bring the PSL into compliance.

Step 4: Schedule an Inspection with EBMUD and Pay Compliance Certificate Fee on behalf of the Property Owner

After work on the PSL is completed, go online to www.eastbaypsl.com to schedule an inspection for EBMUD to witness a water or air pressure verification test on the entire lateral. Use a credit card to pay the \$150 Compliance Certificate fee. You may also pay by cash or check at the EBMUD New Business Office at 375 11th Street, First Floor, Oakland, CA 94607.

Contractors must be ready to conduct the verification test at the beginning of the inspection appointment window. Contractors who are not prepared may be required to reschedule the inspection appointment and forfeit the fee.

Step 5: Set Up Water or Air Verification Test

Choose either a hydrostatic (water) test or a low-pressure air test on the entire lateral to demonstrate that the PSL meets the Regional PSL Program compliance requirements. (See verification test setups.)

Step 6: Pass Water or Air Verification Test

A PSL meets the Regional PSL compliance requirements when one of the following criteria is met:

Test Type	Passing Criteria
Hydrostatic (water) Test	There is no observable water level loss in a 5-foot (60 inch) standpipe after 5 minutes under 5 feet of head.
Low Pressure Air Test	Pressure cannot drop more than one psi in 5 minutes (the minimum starting pressure is 3.5 psi).

Retesting the Upper Lateral if the Test Fails

If the entire lateral fails the test, the contractor may be required by the EBMUD inspector to reposition the testing equipment to test only the upper lateral for compliance. If there is not sufficient time in the scheduled appointment window, the contractor should call 1-866-40-EBMUD to make a same day or next day appointment (if available) to test the upper lateral. A Compliance Certificate will be issued when the entire lateral passes the test.

Step 7: Print or Download Compliance Certificate

After the PSL passes a water or air verification test, a Compliance Certificate will be available for the property owner to print or download from any computer with internet access at www.eastbaypsl.com. The contractor's tasks are complete.

Program Audits


To ensure that verification tests are conducted in accordance with these guidelines and that results are accurately reported, EBMUD will be conducting audits. EBMUD may conduct on-site audits of contractor test documentation and/or re-test selected laterals using EBMUD staff or other contractors. Enforcement action can be taken against contractors who fail to maintain adequate records or who are found to have falsified test results to obtain a Compliance Certificate. For additional information go to www.eastbaypsl.com or contact EBMUD's Private Sewer Lateral Program Administrator at (510) 287-0205.

Verification Test Setups

Hydrostatic Water Test

The contractor shall provide all materials and equipment necessary to conduct the test. The test assembly shall include the following equipment:

- Appropriate pipe test plugs and caps to be used during lateral testing.
- A standpipe that can be connected to the building cleanout riser to allow a pressure head of 5 feet (60 inches) above the highest point of the lateral section being tested. The diameter of the standpipe shall be no greater than 4 inches and no less than 2 inches.

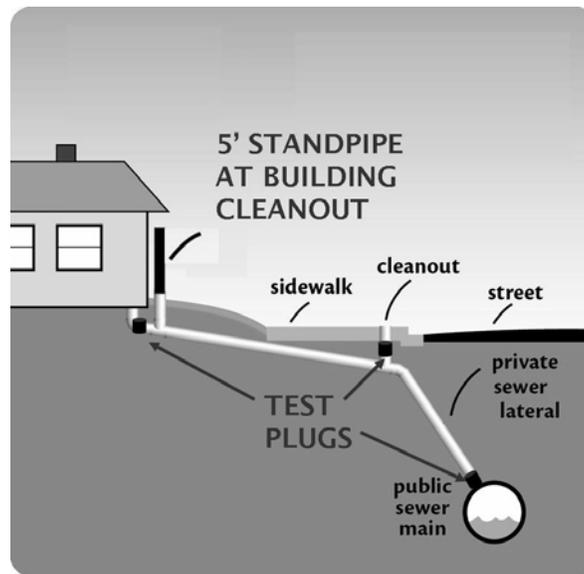

Hydrostatic (Water) Test Setup


Testing Procedure

- The entire lateral must be tested. Plug the sewer lateral immediately upstream of the connection to the sewer main and immediately upstream of the building cleanout. If needed, a wye connection may be installed for the insertion of a testing plug in the lateral just above the joint at the public sewer main (check City requirements.) After the test is complete, the wye should be capped and buried. If there is a curb or property line cleanout present, plug the cleanout riser using an airtight cleanout cover or plug located near the top of the cleanout riser. *Failure to bleed the air out of the cleanout riser while filling the pipe with water may result in a failed test.*
- Install a temporary standpipe at the building cleanout with the open end 5 feet (60 inches) above the highest point of the PSL section being tested.
- Fill the standpipe with water and monitor it for at least 5 minutes or until the water level becomes stable. Add water as needed to maintain 5 feet of head at the top of the standpipe. The water level is stable when there is no observed drop in the water level of the standpipe.
- Begin the test. No water may be added to the standpipe once the test has started. The lateral passes the test if there is no observable water loss at the top of the 5 foot standpipe after 5 minutes.

Low Pressure Air Test

The contractor shall provide all materials and equipment necessary to conduct the test. The test assembly shall include the following equipment:

- Appropriate pipe test plugs and caps to be used during lateral testing.
- A test assembly that allows the application of pressurized air to the pipe being tested, provides connections for the air pressure gauge, and includes a 3/8" female pipe thread connection to allow a second pressure test gauge to be connected in parallel to the pressure test gauge.
- A pressure test gauge that is in good working order and has a range of 0 to 10 pounds per square inch (psi) that can be accurately read to 0.1 psi.
- A reliable source of pressurized air with a pressure regulator as needed to conduct the test.

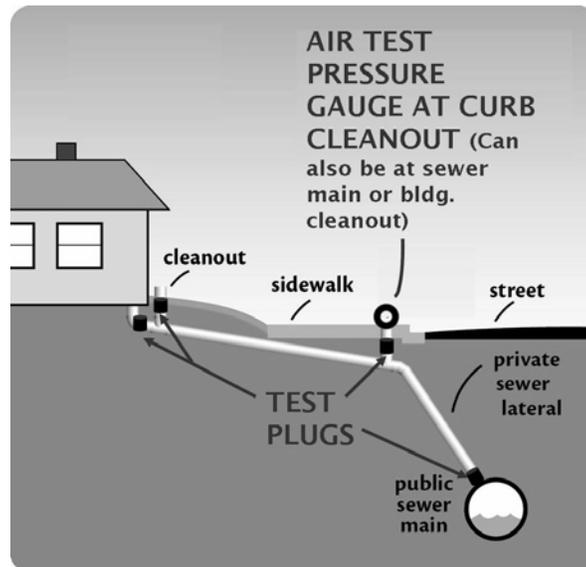

Low Pressure Air Test Setup

Testing Procedure

- The entire lateral must be tested. Plug the sewer lateral immediately upstream of the connection to the sewer main and immediately upstream of the building cleanout. If needed, a wye connection may be installed for the insertion of a testing plug in the lateral just above the joint at the public sewer main (check City requirements.) After the test is complete, the wye should be capped and buried. If there is a curb or property line cleanout present, plug the cleanout riser using an airtight cleanout cover or plug located near the top of the cleanout riser.
- Apply pressurized air to the test assembly and raise the internal pressure to approximately 4 psi. Pressure may be applied from either end of the lateral.
- Maintain the internal air pressure between 3.5 and 4.0 psi for at least two minutes to allow the air pressure and internal temperature to stabilize. The minimum starting pressure is 3.5 psi.
- Disconnect the pressurized air supply and begin timing the test. No additional air may be added once the test has started.
- The lateral passes the test if the pressure does not drop more than one psi in 5 minutes.